



Mobile Printer Bluetooth Connection Manual

(Rev.1.0)

CONTENTS

1. Manual Information.....	1
2. Precautions.....	1
3. General Sequence for Bluetooth Connections.....	1
4. Bluetooth Connection Instructions.....	2
4.1 Bluetooth Dongle.....	2

1. Manual Information

This Bluetooth Connection Manual provides information on the connection of Bluetooth enabled devices (PDAs, PCs, etc.) with the printer.

We maintain ongoing efforts to enhance and upgrade the functions and quality of all our products. In following, product specifications and/or user manual content may be changed without prior notice.

2. Precautions

2-1 To connect the printer with another device via Bluetooth, the devices must be within 10m of one another. The connection is broken if the distance between devices exceeds 10m.

2-2 The maximum separating distance may be shortened if transmission obstacles, such as cement walls, are present.

2-3 If a device (such as a microwave oven, wireless LAN, etc.) that uses the same frequency is present, transmission may be interrupted. Separate the printer and Bluetooth-enabled device from such interrupting devices by a distance of at least 5m.

3. General Sequence for Bluetooth Connections

Bluetooth connection methods vary by device. The following is the general sequence for Bluetooth connections, provided for reference purposes.

3-1 Turn on power of each device

- PDAs, PCs (Bluetooth Dongle), Printers, etc.

3-2 Run a Bluetooth connection program on the PDA or PC.

3-3 Search for the peripheral with which to establish the connection.

- Search for the printer.

3-4 Register this Printer from the search results.

- If a security setting is enabled, register after entering the PIN Code.

(PIN Code=Pass Key: password of the Bluetooth device, Default code: 0000)

- You can check the bluetooth pairing password through self-inspection by printed page view.(Refer to the user's manual for more detail)

3-5 Test the connection.


- When connected, confirm the designated COM port of fixed COM port and print.

4. Bluetooth Connection Instructions


 Warning: In different operating systems, the screen may have slight differences. Please operate it according to the tips. Take MPT-II (Windows 10) for example.

4.1 Bluetooth Dongle



1. Install the Windows Driver program. (Please refer to the Windows Driver Manual)
2. After purchasing the Bluetooth Dongle.
3. Connect the Bluetooth Dongle to the USB port of the PC.
4. Turn on the printer.
5. After that, the Bluetooth icon will show at the lower right of the screen.

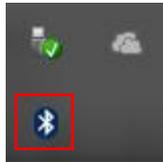


6. Right-click the icon, choose "Add a Bluetooth Device".

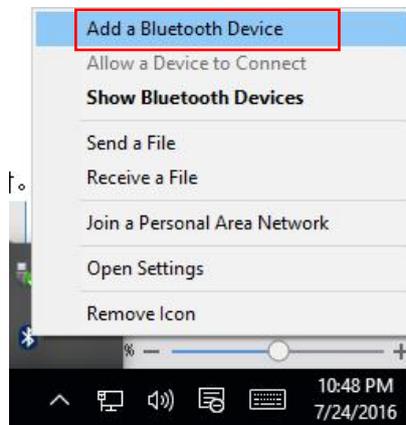

7. Choose “Bluetooth”, wait until the show is ready and Bluetooth pairing. Choose the right model then click “Pair”, if the printer has a password enter the password for pairing.

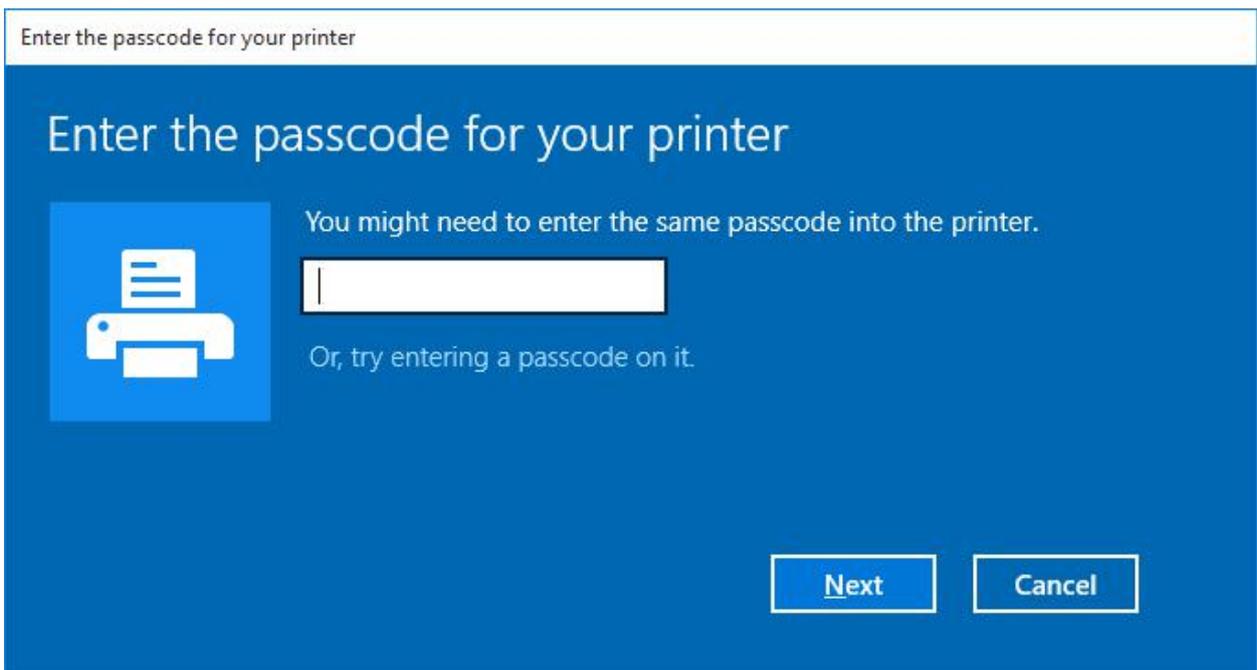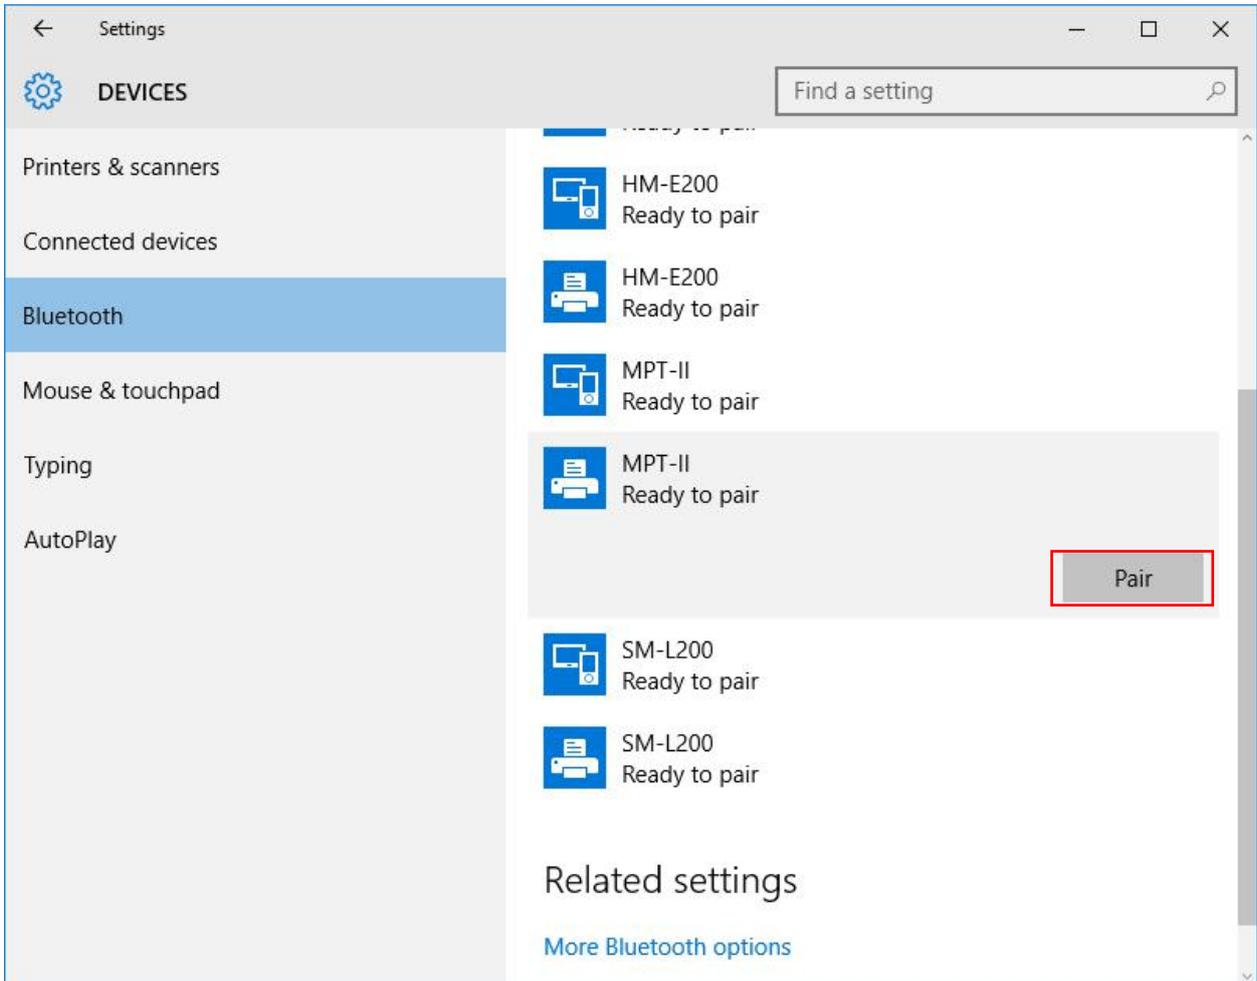


8. The paired connection is successfully displayed as shown below

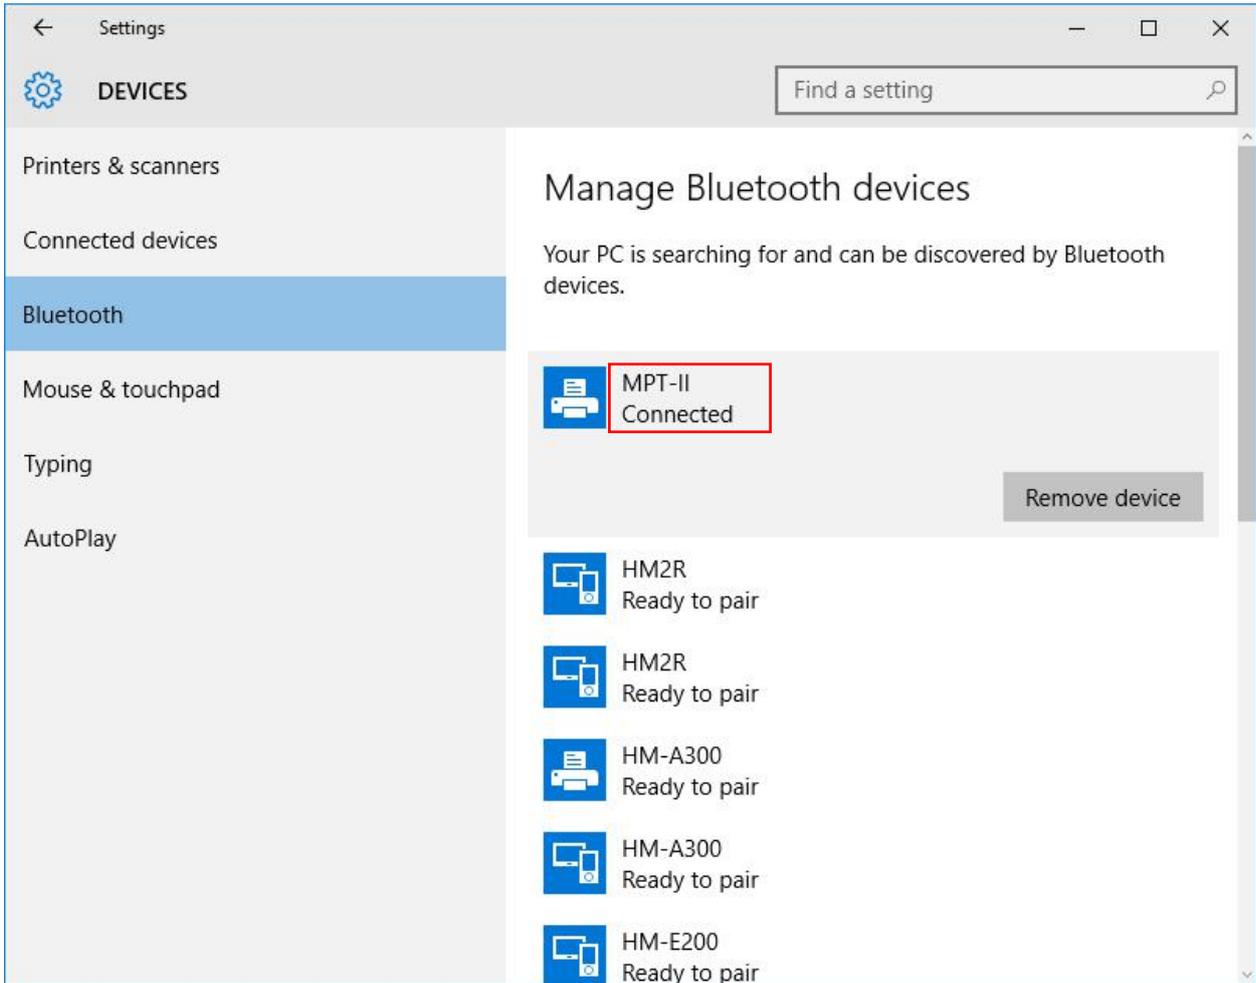


9. Into the “Devices and Printers”, you can see the corresponding Bluetooth icon.




10. Right click the Bluetooth icon, and choose “Properties”.

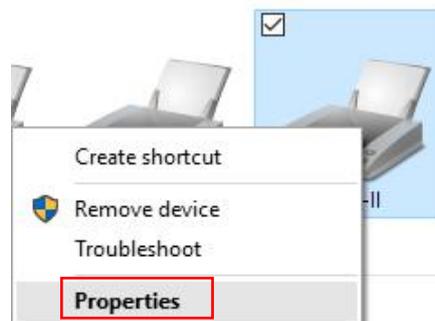


11. In the bluetooth properties, choose "Services", that is connected to a Bluetooth port

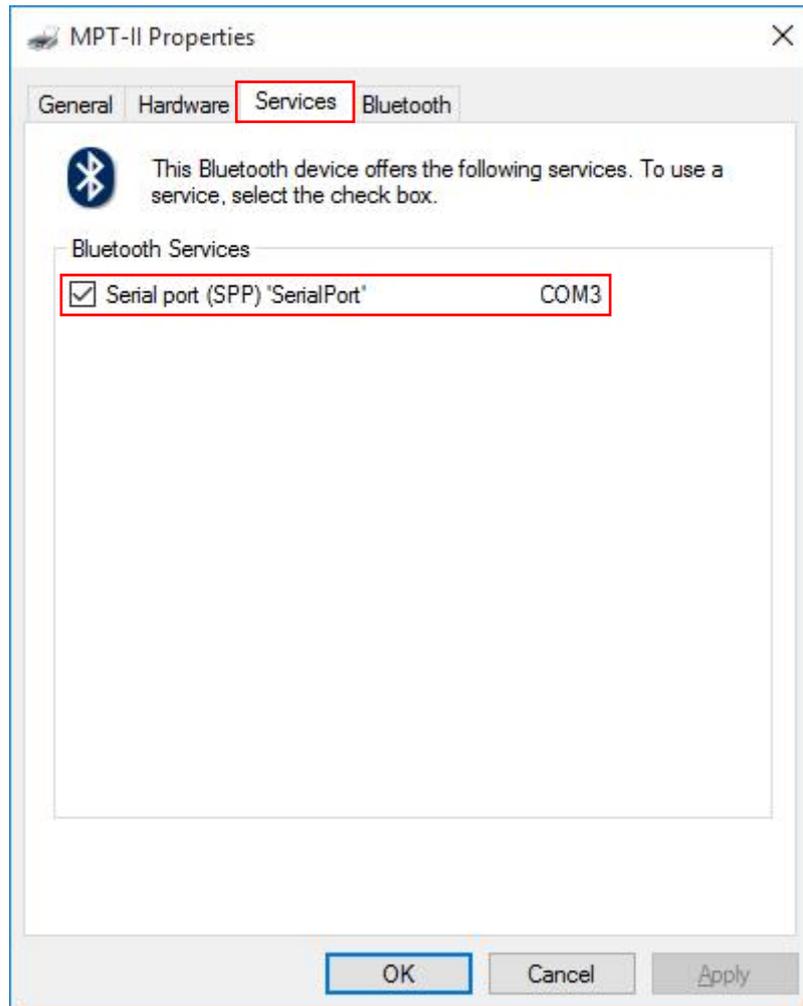

12. Into the "Devices and Printers", you can see the corresponding printer icon, right click and choose "Printer properties".

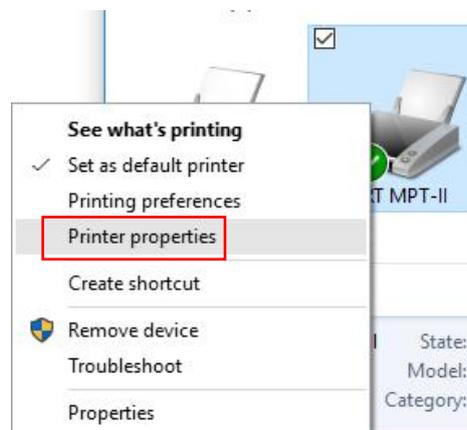

13. In the “Printer properties”, choose “port”, select (11)step that port, then click “Apply”

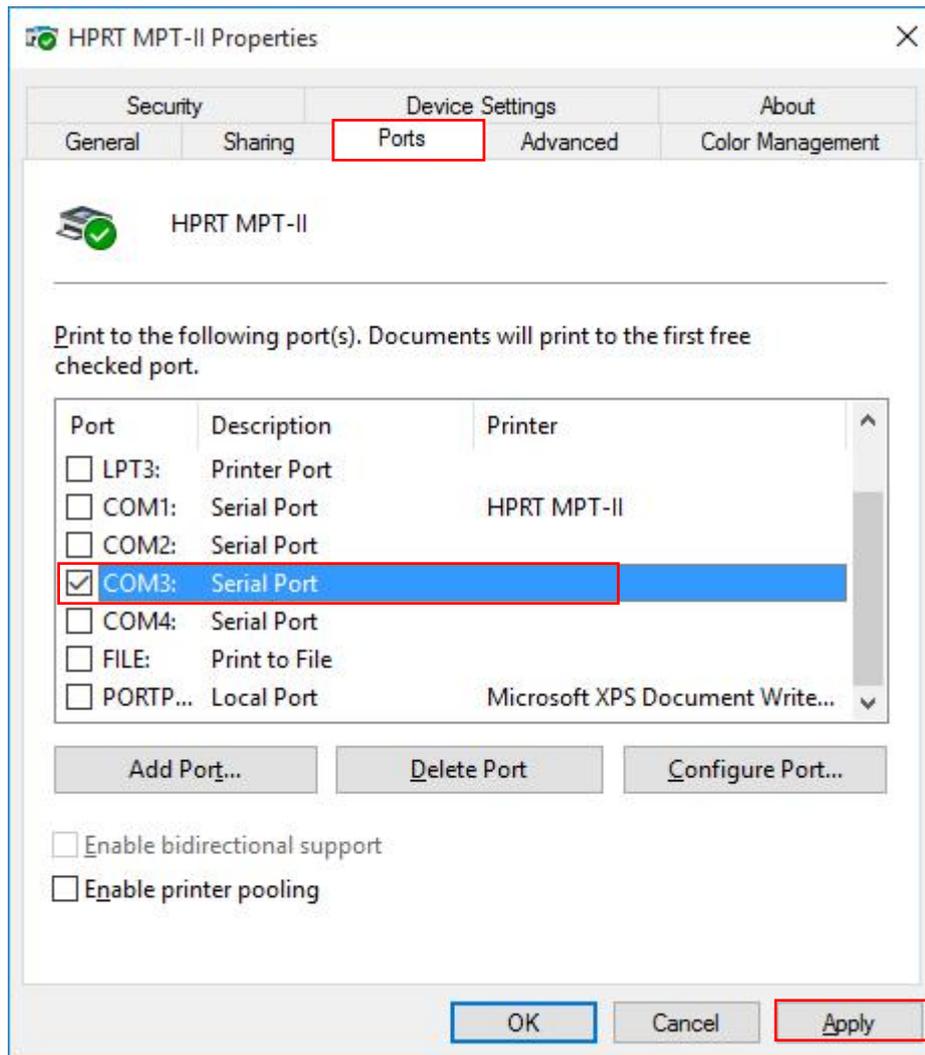

14. Print Driver test page to see if the driver test page can be printed normally; if fails, check whether Bluetooth is disconnected or the corresponding COM port is occupied.

Note: If using a laptop you can ignore 2 and 3 steps.